


installation guide


Wall to Wall / Tile to Tile




Creative Drain Solutions™

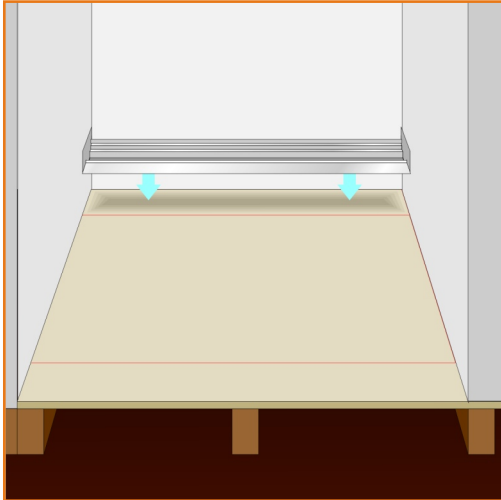


1 Mark out floor area to suit drain size.

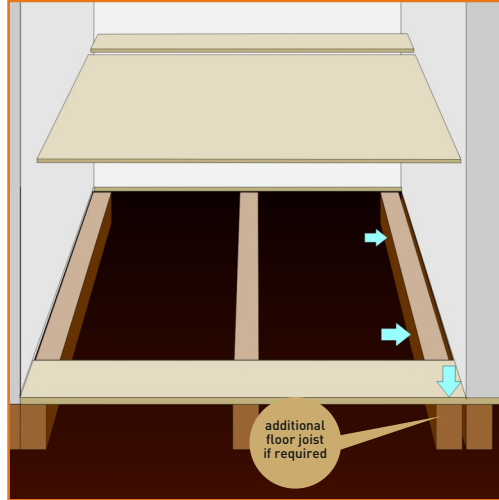


2 Remove floor area to gain access to floor joists, add additional floor joist support if necessary.

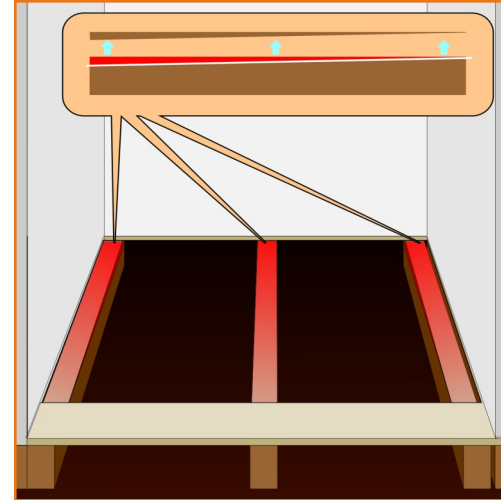


3 Plane down joists to create desired fall as per diagram.

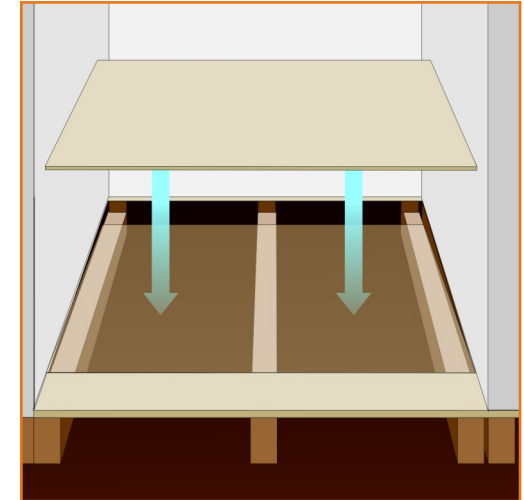


4 After fall has been created, install new floor leaving room for new drain at rear.

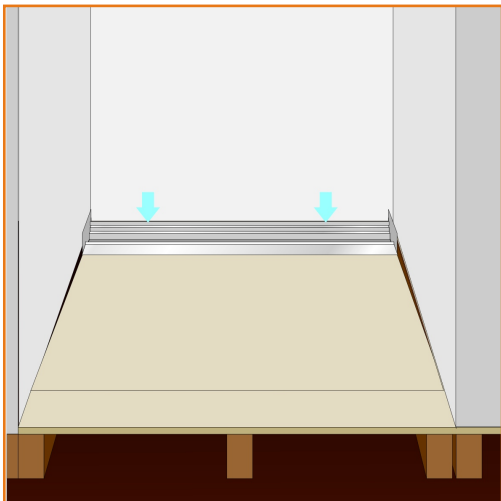


5 Check that the drain fits prior to installing ceramic tile underlay.

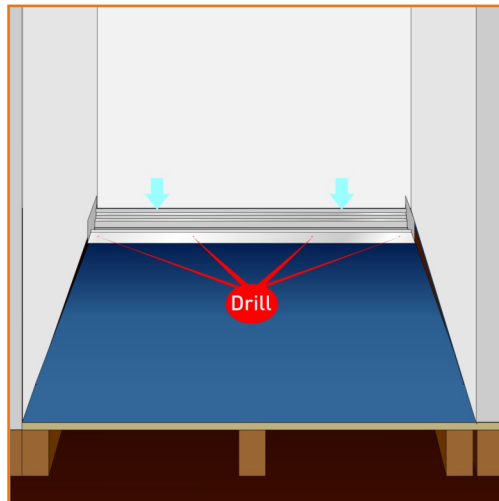

6 After installing ceramic tile underlay, re check the drain fit. Drill fixing points to drain.

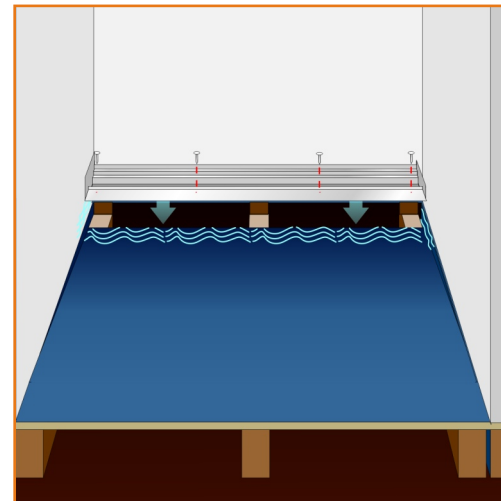

7 Install drain using sealant and 20mm clouts or similar.

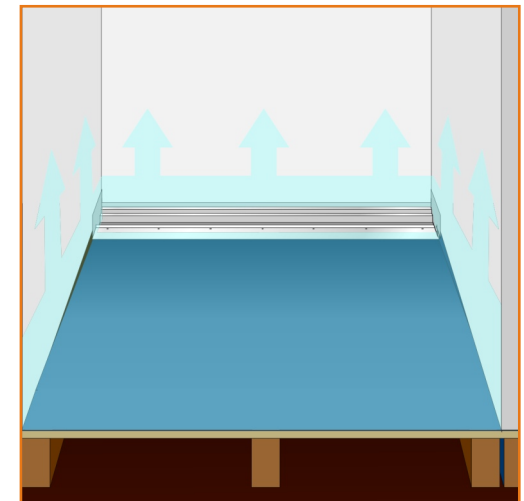

8 Fit over flashing with sealant. You bathroom is now ready for final waterproofing and tiling.